

The background of the entire page is a dark, textured surface. In the upper left corner, the word "VIZIO" is written in a clean, white, sans-serif font. In the upper right corner, the text "Meijer.com" is displayed in a smaller, white, sans-serif font. A large, circular, embossed-style logo is positioned on the right side of the page. The logo features a five-pointed star in the center, surrounded by concentric circles and the words "ENTERTAINMENT" and "WALL TO WALL" in a circular arrangement. Swirling, ethereal red smoke or light trails flow across the middle of the page, starting from the left and moving towards the right, partially obscuring the circular logo.

VIZIO

Meijer.com

THEATER 3D™ LCD HDTV WITH VIZIO INTERNET APPS®

E3D320VX / E3D420VX / E3D470VX

QUICK START GUIDE

PACKAGE CONTENTS

Meijer.com



1 Pair
Basic Theater 3D Glasses



 
VIZIO 3D LCD HDTV with Stand



1 Pair
Premium Theater 3D Glasses



Remote Control with
Batteries

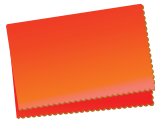


Cleaning Cloth



Safety Cable
(E3D420VX and E3D470VX only)



 Power Cord

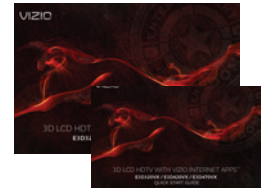

User Manual and
Quick Start Guide

USING THE REMOTE

Meijer.com



Power/Standby: Turn the TV on or off.

Input: Change the input device.

App Launcher: Launch the **VOD** (VIZIO On-Demand), **Netflix**, or **VUDU** App.

A/V Controls: Control external device (CEC-enabled devices only).

Info: Display the Info Window.

CC: Open the Closed Captioning menu.

Menu: Display the on-screen menu.

Exit: Close the on-screen menu.

Arrow: Navigate the on-screen menu and episode guide.

OK: Select highlighted menu option.

Guide: Display the episode guide (digital channels only).

Back: Go to the previous on-screen menu options.

VIA Shortcuts: Control VIZIO Internet Apps.

Channel Up/Down: Change the channel. With each press of the button, the channel will increase or decrease by one.

Volume Up/Down: Increase or decrease the loudness of the TV's audio.

V Button: Start VIA Internet Apps.

Mute: Turn the sound off or on. When mute is activated, the TV's audio is turned off.

Last: Return to the channel last viewed.

Number Pad: Use the number pad to manually enter a channel.

Dash (-): Use with number pad to manually enter a digital sub-channel. (For example, 18-4 or 18-5.)

3D: Activate 3D content.

QWERTY Keypad: Enter letters and numbers.

INSTALLING THE BASE

Meijer.com



Though your TV has a stand included, it can also be mounted on a wall. VIZIO recommends the **XMT1200 Ultra Slim Tilt Universal Wall Mount**. This easy-to-install wall mount supports 37" to 60" HDTVs up to 120 pounds and features:

- A built-in bubble level and is less than 2" thin
- Tilts up to 15° downward – perfect for mounting above eye level
- Includes \$10,000 insurance and 1-year warranty

Visit www.VIZIO.com to purchase online.

VIZIO RECOMMENDS



Place the TV screen-down on a clean, flat surface. To prevent scratches or damage to the screen, place the TV on a soft surface, such as carpet, rug, or blanket.

2



Align the stand with the holes on the back of the TV.

Using a philips-head screwdriver, attach the base to the TV by inserting and tightening the 6 included screws.

3



Move the TV with attached stand into an upright position and place on a flat, level, and stable surface.

FIRST-TIME SETUP

Meijer.com

1



Remove the battery cover by pressing gently and sliding away from the remote.

Insert the batteries. The + and - symbols on the batteries must correspond to the + and - symbols inside the battery compartment.

Replace the battery cover by gently sliding it back into place.

2



Connect the power cord to the back of the TV.

Plug the power cord into an electrical outlet.

3



If you have an external antenna or a cable connection that extends from a wall outlet, connect it to the TV with an RF/Coaxial cable.

If you have a high-speed internet connection and would like to connect the TV with an ethernet cable, connect it to the back of the TV as shown.

4

 


Turn the TV on by pressing the **Power/Standby** button on the remote.

The Setup App is displayed.

Use the **Arrow** buttons on the remote to highlight **Home Mode Setup** and press **OK**.

5

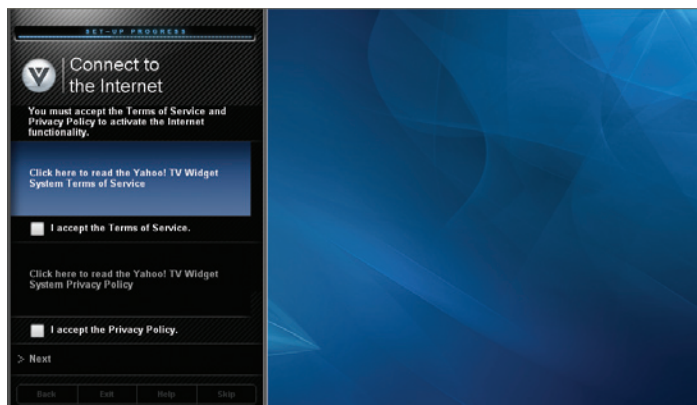

Use the **OK** and **Arrow Up/Down** buttons on the remote to read and accept the Terms of Service and Privacy Policy for Yahoo! TV Widgets.

When you are finished, highlight **Next** and press **OK**.

6



Select the name of your wireless network from the list of available networks and press **OK**.

Enter your network key using the on-screen keyboard, then highlight **Connect** and press **OK**.



If the TV is connected to your network with an ethernet cable, you will not see this screen.

 
7



Enter your First Name, Last Name, Phone Number, ZIP Code, and E-mail Address using the on-screen keyboard.

Highlight **Next** and press **OK**.

8

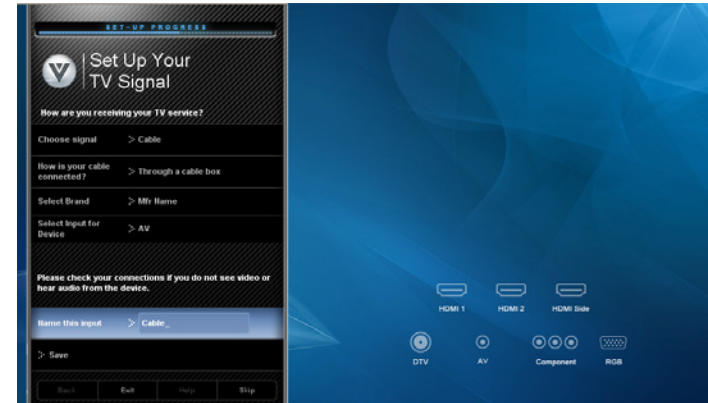

Answer the on-screen questions about your TV connection using the **Arrow** and **OK** buttons on the remote.

When you have finished the channel scan, highlight **Exit to Live TV** and press **OK**.

The First-Time Setup is complete.



To get the best high-resolution picture and sound on your new VIZIO 3D TV, connect your devices with an HDMI cable.

VIZIO High Speed HDMI Cables are manufactured to produce the best picture on VIZIO TVs and feature:

- 1080p and for full HD video and future Ultra-HD video
- Great flexibility for thin wall mounts
- Stays securely connected at sharp angles
- Limited lifetime warranty

Visit www.VIZIO.com to purchase online.

VIZIO RECOMMENDS

1



HDMI



Component



Composite AV

Ensure your device has one of the above ports.

Turn your device and the TV off.

Connect your devices using the connection chart on the next page. This chart shows the most common connections. If you would like to see additional connection options, see *Connecting Your Devices* in the user manual.

2



Blu-ray/DVD Player, Game Console,
or other Device



Back of TV

CHOOSE ONE:

HDMI



High Speed HDMI Cable*

 


HDMI




OR

Y
CB/PB
CR/PR




Component Video Cable*

 


Y
CB/PB
CR/PR

 L
R




Audio Cable*

 


L
R

OR

 L
R
VIDEO



Composite AV Cable*

 

L
R
VIDEO

Best Picture
(3D-Ready)

Better Picture
(2D Only)

Good Picture
(2D Only)

*Not Included

HOW TO VIEW 3D

Meijer.com

1



Blu-ray 3D Disc



VIZIO Theater 3D Glasses



3D-Ready HDMI Cable



3D Blu-ray Player

You will need:

- A 3D Blu-ray™ player*
- A Blu-ray 3D™ disc*
- VIZIO Theater 3D Glasses
- A 3D-ready HDMI cable connecting the 3D Blu-ray player to your 3D HDTV*

*Not Included

2



Turn on the TV and select the input to which the 3D Blu-ray player is connected (HDMI-1, HDMI-2, etc).

Turn your 3D Blu-ray player on and insert a Blu-ray 3D disc.

Select the **Play Movie** option in the Blu-ray 3D disc's main menu.

3

 


The 3D HDTV asks if you would like to watch the movie in 3D.

Select **Yes** and press **OK**.

Put on your VIZIO Theater 3D glasses and enjoy Theater 3D!

4

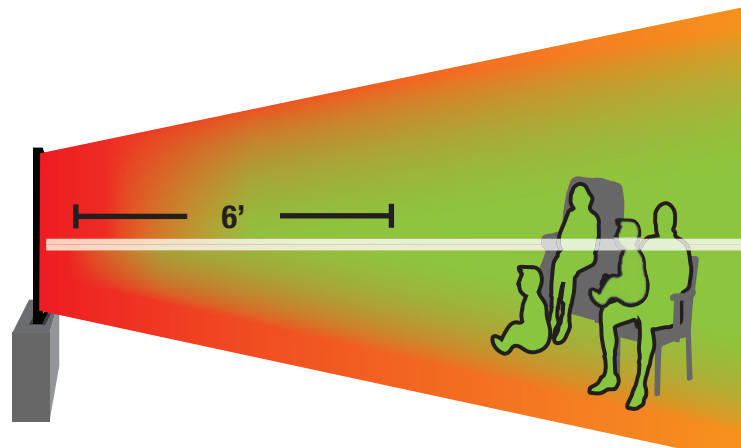

For the best 3D experience:

- Try to view the TV **straight-on**, as shown above. Do not view the TV at an extreme angle, as some of the 3D effect will be lost.
- Sit at least **6 feet** from the TV.

For more detailed information on viewing 3D, see the User Manual.

USING VIZIO INTERNET APPS

Meijer.com

BLOCKBUSTER
ON DEMAND™

FREE Entertainment Bundle worth \$25+ when you activate Blockbuster on your VIZIO VIA TV.†

Instant streaming ready
NETFLIX

FREE Trial! Go to www.netflix.com/VIZIO. See Terms of Use for details.

Rhapsody
MUSIC WITHOUT LIMITS

Listen to millions of songs on demand. Go to www.rhapsody.com/VIZIO to get your free 30-day trial.*

vudu
1080p HD Movies

Activate VUDU on your VIZIO VIA TV to receive a FREE 1080p HD RENTAL.**



For the best online experience, VIZIO recommends the next-generation **XWR100 Dual-Band HD Video and Wireless Internet Router**. This state-of-the-art router prioritizes the sending of media files over regular data files, delivering a superior streaming experience with fewer delays.

Visit www.VIZIO.com to purchase online.

†See www.blockbuster.com/VIZIO for details.

*US only. Credit Card required. See site for complete terms.

**VUDU account activation required.

VIZIO RECOMMENDS

1



V Button

Turn the TV on. Press the **V Button** on the remote.



To use VIZIO Internet Apps, your TV must be connected to a high-speed internet connection. If you did not set up your network during First-Time Setup, see **Setting Up Your Network Connection** in the User Manual.

 
2



To start an App, use the **Left/Right Arrow** buttons to highlight an App from the App Bar and press **OK**.

The highlighted App is in the lower left corner of the screen.

3

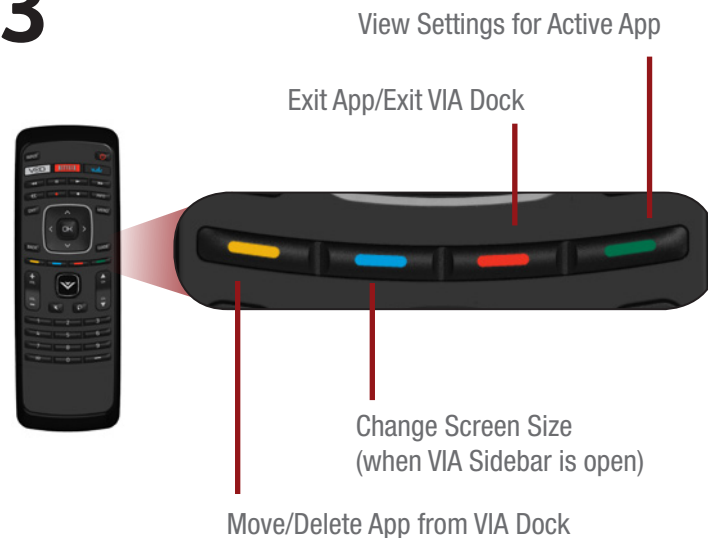

Once you have started an App, use the **Arrow**, **OK**, and **VIA Shortcut** buttons on the remote to control the App.



Add home theater surround sound without the excess clutter of wires! The **VIZIO 5.1 Surround Sound Home Theater with Wireless Subwoofer** delivers big home theater sound in a sleek design that's perfect for your TV:

- Universal 5.1 soundbar with rear satellite speakers and wireless subwoofer turns any TV into a home theater
- Wireless subwoofer uses Wireless HD Audio™ 2.4 GHz, so you can place it anywhere in the room
- Premium sound with Dolby Digital®, DTS, SRS CircleCinema HD™ and SRS TruVolume™.



Complete your Theater 3D experience! The **VIZIO 3D Blu-ray Player with Wireless Internet Apps** delivers 3D, full 1080p HD video, 7.1 surround sound, and has built-in 802.11n dual-band wireless for easy access to movies, TV shows, music and more from the Internet.

- Exceptional 3D performance
- Streams movies, music, and more with VIZIO Wireless Internet Apps
- Built-in Wi-Fi 802.11n

HELP TOPICS

Meijer.com

Products are often returned due to a technical problem rather than a defective product that may result in unnecessary shipping charges billed to you. Our trained support personnel can often resolve the problem over the phone. For more information on warranty service or repair, after the warranty period, please contact our Support Department at the number below.

Customer support and quality service are integral parts of VIZIO's commitment to service excellence. For technical assistance contact our VIZIO Technical Support Department via email or phone.

Please have your VIZIO model number, serial number, and date of purchase available before your call.

Phone: (877) 698-4946

Fax: (949) 585-9563

Email: techsupport@vizio.com

Web: www.vizio.com

Hours of operation:

Monday - Friday: 6 am to 9 pm (PST)

Saturday - Sunday: 8 am to 4pm (PST)

There is no power.

- Ensure the power cord is securely connected to the AC socket on the TV and a working electrical outlet.
- Press the **Power/Standby** button on the remote or on the right side of the TV.
- Try plugging the power cord into a different electrical outlet.

There is a picture, but there is no sound.

- Press the **Volume Up** button on the remote or on the right side of the TV.
- Press the **MUTE** button on the remote to ensure Mute is off.
- Press **MENU**, then select **TV Settings > Audio**. Ensure **TV Speakers** is set to **On**.

The picture quality seems low.

- View high-definition (HD) programs when possible.
- Ensure all cables are securely connected.
- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.

I cannot return to the Setup App.

- The on-screen menu has guided setup. Press **MENU**, then select **Help > System Reset > Start Setup Wizard**. Enter your PIN (default is **0000**). Select **Yes**.

There are black/gray bars on the top/bottom/sides of the picture.

- Set the TV to Wide or Zoom Mode. Press **MENU**, then select **Wide**. Highlight **Wide** or **Zoom** and press **OK**.
- Adjust the video settings of your external device (Blu-ray™ or DVD player).
- If using the RGB (computer) input, ensure you are using a supported desktop resolution.
- Some television channels add black bars to the picture.

I cannot view 3D content.

- Ensure you have a 3D Blu-ray™ player, VIZIO Theater 3D glasses, and a Blu-ray 3D™ disc.
- Turn your 3D HDTV and 3D Blu-ray player off. Turn the 3D Blu-ray Player on first, then turn the 3D HDTV on. Try to play your Blu-ray 3D™ movie again.
- Ensure your 3D Blu-ray player's 3D setting is **Enabled/Auto**. (Devices differ, see your player's user guide.)

The TV displays "No Signal"

- Ensure your connected devices are turned on.
- Press the **INPUT** button on the remote and select the input to which your device is connected (HDMI, Composite, etc).

The colors on the TV don't look right.

- Adjust the Color and Tint settings in the Picture menu. See *Adjusting the Picture Settings* in the user manual.
- Reset the picture settings. See *Resetting the Picture Settings* in the user manual.
- Check all cables to ensure they are securely attached.



ENTERTAINMENT FREEDOM FOR ALL



TRADEMARKS SHOWN ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS. IMAGES USED ARE FOR ILLUSTRATION PURPOSES ONLY. VIZIO, THE V LOGO, WHERE VISION MEETS VALUE, AND OTHER VIZIO TRADEMARKS ARE THE INTELLECTUAL PROPERTY OF VIZIO INC. PRODUCT FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.
© 2011 VIZIO INC. ALL RIGHTS RESERVED.

110110ST-NC